



Inwall Cavity Frames Pty Ltd
ABN: 70 658 876 058
33 Cameron Street,
Cranbourne
PH: (03) 9000 9255
www.inwall.com.au

Soft Close Installation Guide


ATTENTION:

Inwall Soft Closers are available in several different weight ranges: 0kg-20kg, 20kg-40kg, 40kg-60kg, 60kg-80kg and 80kg-160kg. It is important to ensure the weight of your door is within the weight range of the Soft Close kit which has been provided.

There are 3 different sets of instructions. Identify if you have been provided a ProClip, Summit or double cavity (in either model) as this will determine which instruction set to follow.


IMPORTANT

Before commencing installation it is critical that the Soft Close is 'preloaded'. To do this grab your Soft Closer which is attached to the leading roller, locate the catch which is positioned in the middle of the Soft Closer and push it towards the roller until you hear a click.

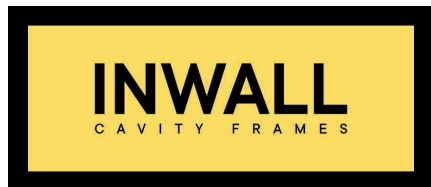

Inwall Cavity Frames Pty Ltd
 ABN: 70 658 876 058
 33 Cameron Street, Cranbourne
 PH: (03) 9000 9255
 E:sales@inwall.com.au
 www.inwall.com.au

Soft Close Installation Instructions

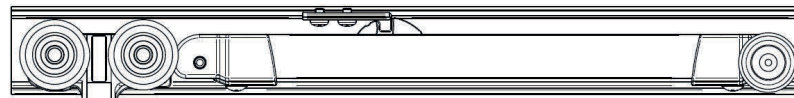


Inwall ProClip Soft Close Single Unit

(complete steps 1-4 of ProClip installation instructions first)


STEP 1 (Fix Brackets)

Screw ProClip brackets into the centre of the door, 80mm from edge of brackets to edge of door.

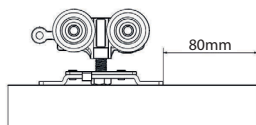

STEP 2 (Feed Rollers)

Feed the rear roller into the track through the end cut out followed by the leading roller with the attached loaded Soft Closer.

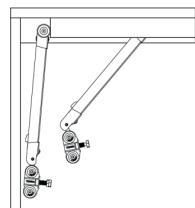

STEP 3 (Hang Door)

Adjust bolts to align with the ProClip Bracket for later attachment. (the 'knob' end of the roller should be pointing towards the centre of the door.)

Angle the door into the cavity frame, attach rear bolt onto slot of ProClip bracket (the bolt will clip into place with minimal resistance), repeat for front roller. Adjust the bolts so the door closes flush and evenly on closing jamb. Adjust height of door with spanner.

STEP 4 (Activator)

Insert the activator into the channel running along the top of the track with the stepped end of the activator facing away from the closing jamb. Position the activator so it sits 300mm away from the closing jamb to the stepped end of the activator.



STEP 5 (Adjustment)



Close the door until soft closer catches in place - the door should stop short of your closing jamb. Measure the distance remaining for the door to travel to the closing jamb and reposition the activator accordingly.

Inwall Summit Soft Close Single Unit

(complete steps 1-6 of Summit installation instructions first)

STEP 1 (Hang Door - Lead Roller)

Feed the leading roller into the track with the attached loaded Soft Closer (Figure A). Slide the spear into the front channel in the door and fasten (Figure B). Adjust the bolts to ensure the door finishes flush against the closing jamb (or plaster if no closing jamb has been provided).

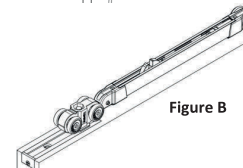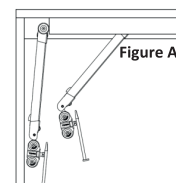

STEP 2 (Activator)

Insert the activator into the channel running along the top of the track with the stepped end of the activator facing away from the closing jamb. Position the activator so it sits 300mm away from the closing jamb to the stepped end of the activator.



STEP 3 (Adjustment)

Close the door until soft closer catches in place - the door should stop short of your closing jamb. Measure the distance remaining for the door to travel to the closing jamb and reposition the activator accordingly.

Inwall Double Soft Close Single Unit

(complete steps according to ProClip or Summit installation instructions first)

STEP 1 (Left Hand Side)

Insert the rear roller of the left hand side door into the centre cut out, slide the roller along to the far left side of the track. Insert the leading roller with the Soft Closer attached (roller end first) into the right hand side of the track along with the soft close wheels. Slide the kit back to the left hand side of the track.

STEP 2 (Right Hand Side)

Insert the rear roller of the right hand side door into the centre cut out, slide the roller along to the far right side of the track. Insert the leading roller with the Soft Closer attached (roller end first) into the left hand side of the track along with the soft close wheels. Slide the kit back to the right hand side of the track.

STEP 3 (Activator)

Insert the activators into the channel running along the top of the track with the stepped end facing away from the centre of the track. Position activators so they sit 300mm away from centre of the track.



STEP 4 (Adjustment)

Close the door until soft closer catches in place - the door should stop short of the centre of the doorway. Measure the distance remaining for the door to travel to the centre of the doorway and reposition activators accordingly.